

Quick Use and Setup Guide



Let's make things better.



PHILIPS

CONTENTS

Important Notice/Warning	1
Making Basic TV Connections	1-2
Operating the Television and Remote Control	2-4
Using the Installation Features	4-7
Using Auto IntelliSense™ to Adjust Picture Convergence	7
Using the Picture-in-Picture (PIP) Feature	8



As an Energy Star® Partner, Philips Consumer Electronics has determined this product meets the Energy Star® guidelines for energy efficiency. Energy Star® is a U.S. registered mark. Using products with the Energy Star® label can save energy. Saving energy reduces air pollution and lowers utility bills.

IMPORTANT

This owner's manual is used with several different television models. Not all features (and drawings) discussed in this manual will necessarily match those found with your television set. This is normal and does not require that you contact your dealer or request service.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD DO NOT EXPOSE THIS UNIT TO RAIN OR EXCESSIVE MOISTURE.

MAKING BASIC TV CONNECTIONS



BEST VIEWING

The major benefit of this projection television is its large viewing screen. To see this large screen at its best, test various locations in the room to find the optimal spot for viewing.

NOTE: Be sure to allow a free flow of air to and from the perforated back cover of the set.

To avoid cabinet warping, cabinet color changes, and increased chance of set failure, do not place the TV where temperatures can become excessively hot—for example, in direct sunlight or near a heating appliance.

Magnetic fields, such as those of external speakers, may cause the picture to distort if the speakers are placed too close to the television. Move the magnetic field source away from the TV until there is no picture distortion.

 


CABLES AND CONNECTORS


If you are new to making TV hookups, you may want to read this section. (The cables and connectors discussed are not supplied with your set. You can buy them at most stores that sell audio or video products. Or call our Customer Care Center at 1-800-531-0039.)

This publication provides you with examples of basic connections. See pages 6–17 in the Directions for Use manual for more information on connections, along with connection examples.


A 75-ohm **coaxial cable** connects signals from an antenna or a cable TV company to the antenna jack on the back of the TV. Coaxial cables use “F” connectors.



 
A **two-way signal splitter** enables you to take a single antenna or cable TV signal and supply it to two different inputs.



 A **300- to 75-ohm twin-lead adapter** accepts the antenna cables (called twin-lead wires) from an antenna, allowing you to connect the antenna signal to the TV.

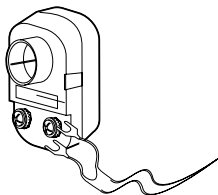

 
Video and audio cables with standard RCA (phono) connectors connect the video and audio jacks of accessory devices such as VCRs and DVD players to the jacks on the TV.

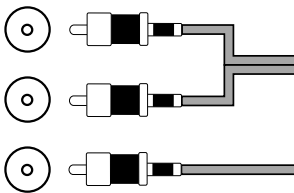

To simplify making connections, the connectors are usually color coded. The jacks on your TV are likewise color coded to match the colors of the connectors. The coding is as follows: yellow for video (composite) and red and white for the right

and left audio channels, respectively. Use an audio cable with a white connector when making mono, or nonstereo, connections. The connectors of video cables used to connect component video or RGB (high-resolution) jacks are often color coded red, green, and blue. Component video connections provide you with the highest possible color and picture resolution.

 An **S-Video cable** connects devices such as DVD players, VCRs, or camcorders to your TV. S-Video provides better picture performance than regular (composite) video connections. S-Video cables can be used only with S-Video-compatible accessory devices. You must also connect the left and right audio cables along with S-Video because the S-Video jack carries only the picture signal, not the sound.



ANTENNA OR CABLE TV

This section shows you how to make a basic TV connection using a cable TV or antenna signal.

If you have cable TV service, you'll simply connect the coaxial cable lead-in from the cable TV company to your TV. If you intend to connect a VHF/UHF antenna, you may need a 300- to 75-ohm adapter, which is not supplied with your TV.

 
NOTE: You should be able to buy optional accessories such as a VHF/UHF antenna or a 300- to 75-ohm adapter at most stores that sell electronics. Or you can call our Customer Care Center at 1-800-531-0039.

BEGIN

1 Connect the Cable TV or antenna signal to the ANTENNA IN 75Ω jack on the rear of the TV.

NOTE: If you are using an antenna with a round coaxial cable (75Ω), then you are ready to connect to the back of the TV. If your antenna has a flat, twin-lead wire (300Ω), you must first attach the antenna wires on a 300- to 75-ohm adapter. Then push the round end of the adapter onto the ANTENNA IN 75Ω jack on the rear of the TV.

2 Insert the TV's power plug into the wall power outlet.

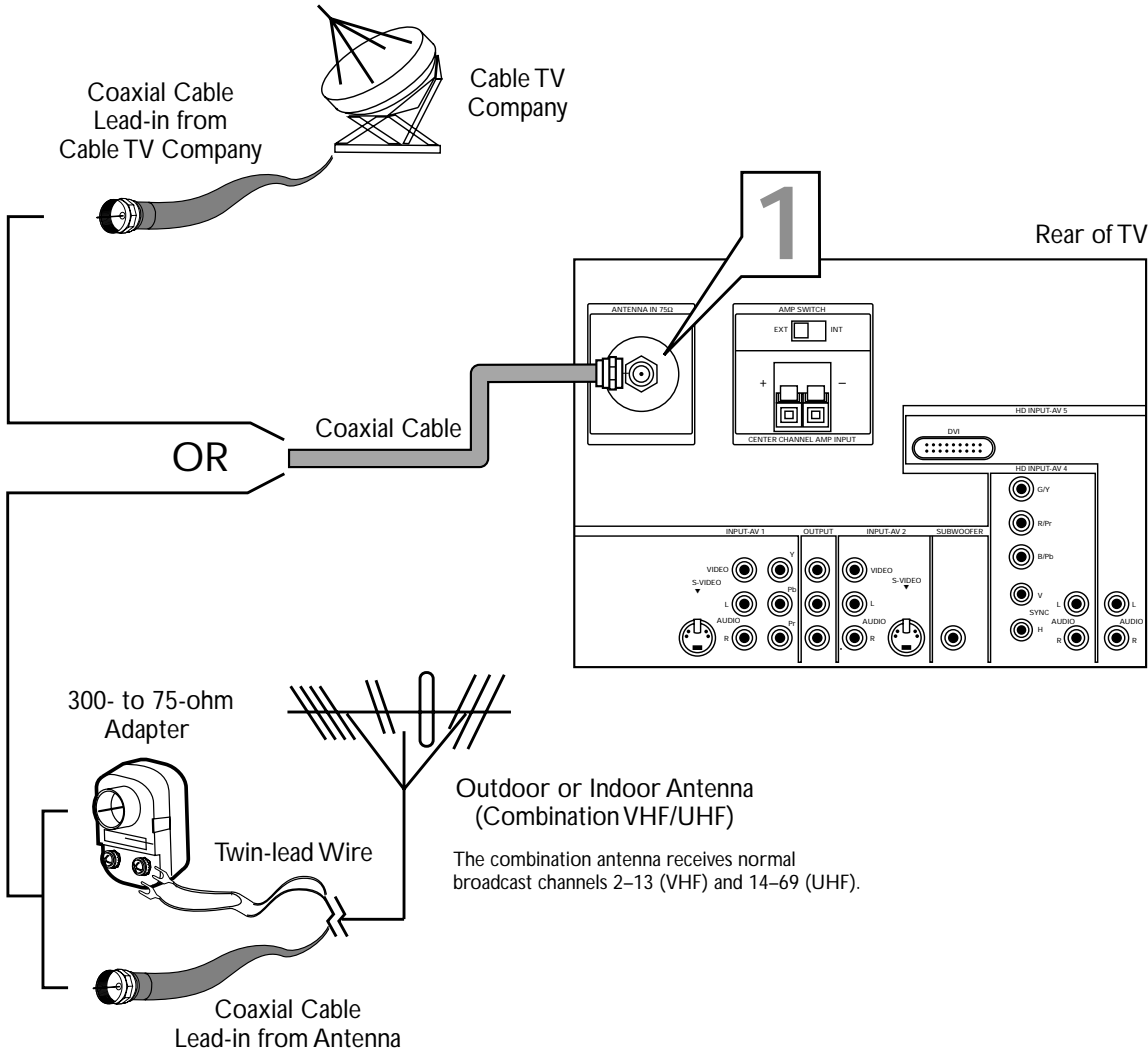

MAKING BASIC TV CONNECTIONS (CONTINUED)



CABLE CONVERTER BOXES

 
Follow the steps below to connect a cable converter box to your TV.

To make the connections in this example, you will need one coaxial cable (75Ω).

NOTE: The coaxial cable is not supplied with your TV. You should be able to buy one at most stores that sell electronics. Or you can call our Customer Care Center at 1-800-531-0039.

BEGIN

- 1 Connect your cable TV signal to the INPUT jack on the back of the cable converter box.
- 2 Connect a coaxial cable from the OUTPUT jack on the back of the cable converter box to the ANTENNA IN 75Ω jack on the rear of the TV.
- 3 Insert the TV's power plug into the wall socket.

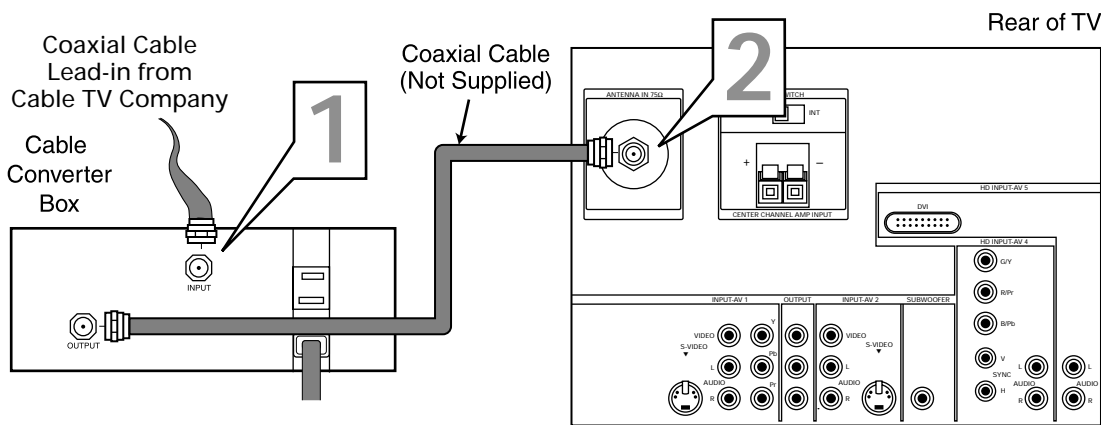

OPERATING THE TELEVISION AND REMOTE CONTROL



 
TELEVISION

USING THE TV BUTTONS

Should your remote control be lost or broken, you can still change some of the basic picture and sound settings with the buttons on the TV. Follow the steps below to familiarize yourself with the functions of the TV buttons.

BEGIN

- 1 Press **POWER/STANDBY** to turn the TV on (or off). Allow about 10 seconds for the TV to power on.
- 2 Press the **VOL(ume) +** or **-** buttons to decrease or increase the sound level.
- Press the VOL(ume) + and - buttons simultaneously to display the onscreen menu. After the menu appears, use these buttons to enter submenus and make selections or adjustments. (Use the CH[annel] Up and Down buttons to move up and down in the menu or submenus.) Press both VOL(ume) buttons simultaneously to back out of the onscreen menus.
- 3 Press **SOURCE SELECT** to choose from among the signal inputs you have connected to the TV.
- 4 Press the **CH(annel) Up** and **Down** buttons to select TV channels.

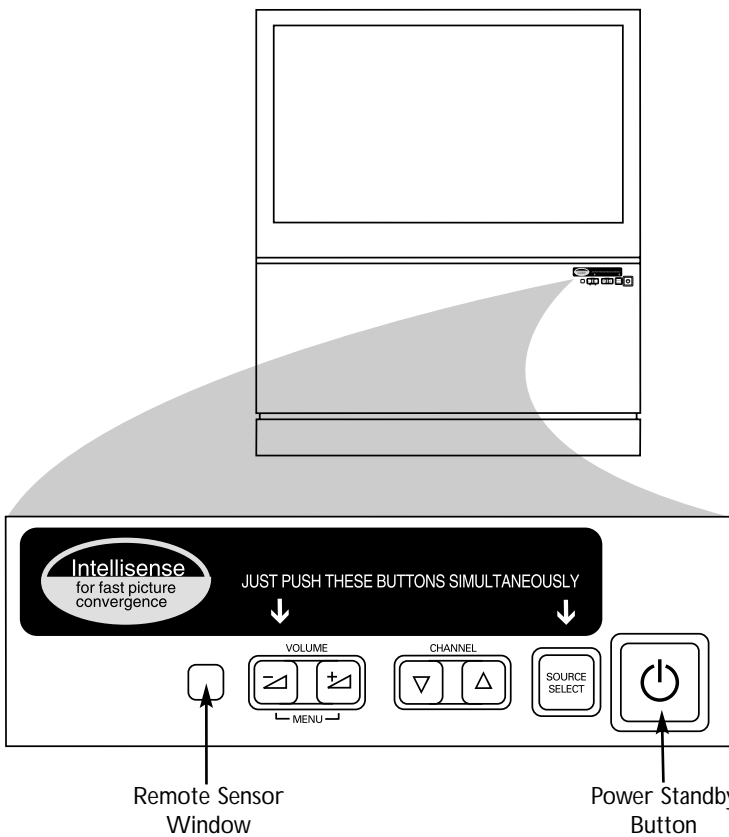

HELPFUL HINTS

- You can press any of the buttons on the front of the TV to turn the TV on, but you must press the Power/Standby button to turn the set off.
- As shown in the illustration below, pressing the VOLUME - and SOURCE SELECT buttons simultaneously activates Auto IntelliSense™. This feature automatically adjusts the picture's convergence (color alignment) if the picture appears fuzzy. For more on Auto IntelliSense™, see page 7.

Auto IntelliSense is a trademark of Philips Consumer Electronics Company. Copyright 2002 Philips Consumer Electronics.



REMOTE CONTROL

INSTALLING BATTERIES

To load the supplied batteries into the remote, follow these steps.

BEGIN

- 1 Gently press and hold the indentation on the back of the remote and slide the battery cover off the remote.
- 2 Place the two "AA" size batteries in the remote's battery case. Ensure that the (+) and (-) ends of the batteries line up correctly with the (+) and (-) inside the case.
- 3 Slide the battery cover back into place.

 


POINTING THE REMOTE

Press the TV mode button on the remote to ensure that the remote sends its commands to the TV. When operating the remote control, point the remote toward the remote sensor window on the TV.

CHECK IT OUT

You can set up your TV remote control to work with accessory devices such as VCRs, DVD players, and cable converter boxes. See pages 18-23 in the *Directions for Use* manual.

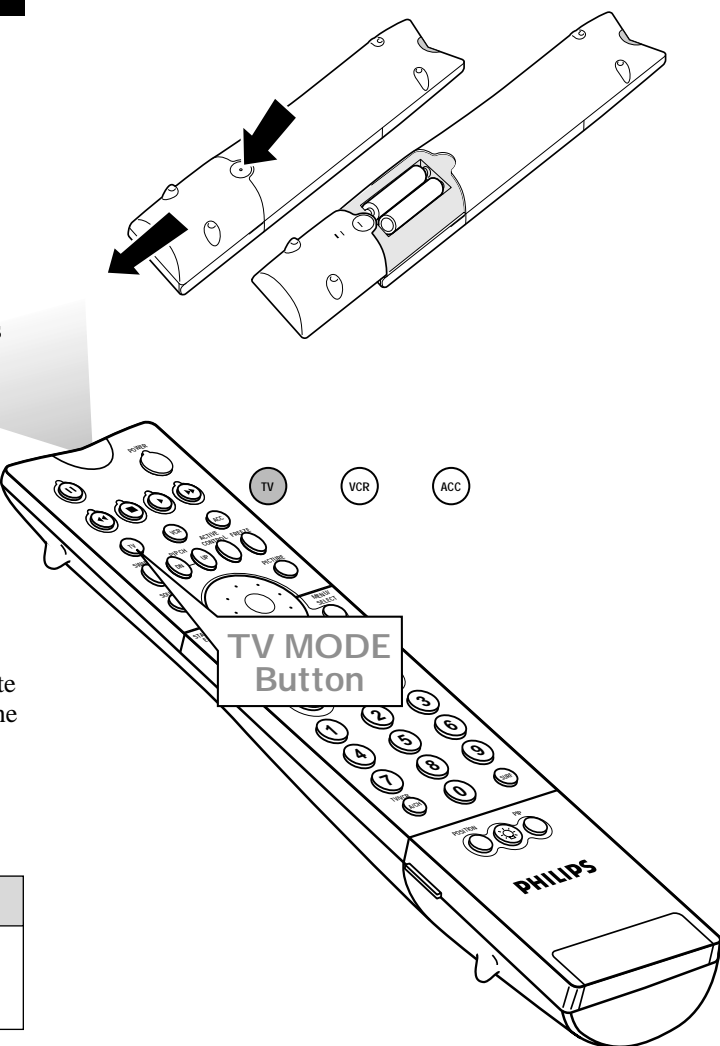

BATTERY USAGE CAUTION

- To prevent battery leakage that may result in injury to you or damage to the remote control:
- Install ALL batteries correctly, + and -, as marked on the unit.
 - Do not mix batteries (OLD and NEW or CARBON and ALKALINE, etc.)
 - Remove batteries when the remote control is not used for a long time.
- Do not take apart, heat, or put batteries in fire.

HELPFUL HINTS

- Be sure to point the remote toward the sensor window on the TV or accessory device you are using the remote to operate.
- Press the correct mode button for the device you want to operate: TV, VCR, ACC (for accessories other than VCRs).
- Be within about 30 feet (10 meters) of the TV or accessory device you are using the remote to operate.
- Avoid dropping the remote on hard surfaces.
- Do not use harsh chemicals to clean the remote. Use only a soft, lightly moistened cloth.

OPERATING THE TELEVISION AND REMOTE CONTROL



REMOTE CONTROL

VCR control buttons

Press to pause, rewind, stop, play, or fast forward a videotape.

TV • VCR • ACC (Mode buttons)

Press to send remote signals to either the TV, VCRs, or other accessory devices such as cable TV converters, satellite receivers, DVDs, or laser disc players. (You may need to program the remote to work accessory devices. See pages 18–23 in the *Directions for Use* manual that came with your TV.)

PIP buttons: SWAP, PIP CH DN/UP, FREEZE

Press to operate the Picture-in-Picture (PIP) features. See page 8 in this publication for more information on using these buttons.

Sound

Press to select an AutoSound™ control. (See page 25 in the *Directions for Use* manual.) Choose from three factory-set controls—Voice, Music, and Theatre—and a Personal control that you set according to your own preferences through the onscreen Sound menu. The three factory-set controls will tailor the TV sound so as to enhance the type of program you are watching.

Status/Exit

Pressing the button once shows the current channel number, name (if set), time (if set), Sleep Timer setting, and sound setting (stereo, mono, SAP, or mute). Pressing the button twice shows the current AutoLock™ settings. Pressing the button once when an onscreen display is showing removes the onscreen display.

Cursor Ring

Up/Down: allows you to select the next or previous menu item in the menu. Left/Right: allows you to access the sub-menus and adjust the settings. When no onscreen displays or menus are present, use the Cursor Ring Left/Right to select a picture format for a video source connected to the ANTENNA, AV1, CVI, AV2, or AV3 (side panel inputs) on the TV.

Volume +/-

Press to adjust the TV sound level.

Number Buttons

Press to select TV channels. When selecting single-digit channels, press the number of the desired channel. The TV will pause for a few seconds and then tune to the selected channel.

TV/VCR

Press while in VCR mode to view the playback of a videotape. Press again to return to TV mode.

A/CH

Press to alternate between the currently viewed channel and the previously viewed channel.

Rec ●

Press this button simultaneously with the ► button when in VCR mode to record.

SAP

Press to select between main sound and SAP (Second Audio Program) when you tune to a program offering SAP. (See page 39 in the *Directions for Use* manual.)

AV

Press repeatedly to select the different signal sources connected to the TV: TV, AV1, CVI, AV2, AV3 (side jack panel), AV4, and AV5. (See page 24 in the *Directions for Use* manual.)

Clock

Press to access the onscreen Timer menu, where you can set the time for the TV's clock or set the TV's Timer features, such as channel switch over, power on set, and power off set. (See page 6 in this publication for setting the time manually. See pages 41–45 in the *Directions for Use* manual for information on using the TV's Timer feature.)

Position


Press to move the PIP picture to any of the four corners of the screen.

Back Light button

Press to light the buttons on the remote control.

PIP

 Press to turn PIP (picture-in-picture) on or off or control the size of the PIP window. (See page 8 in this publication for more information on PIP.)

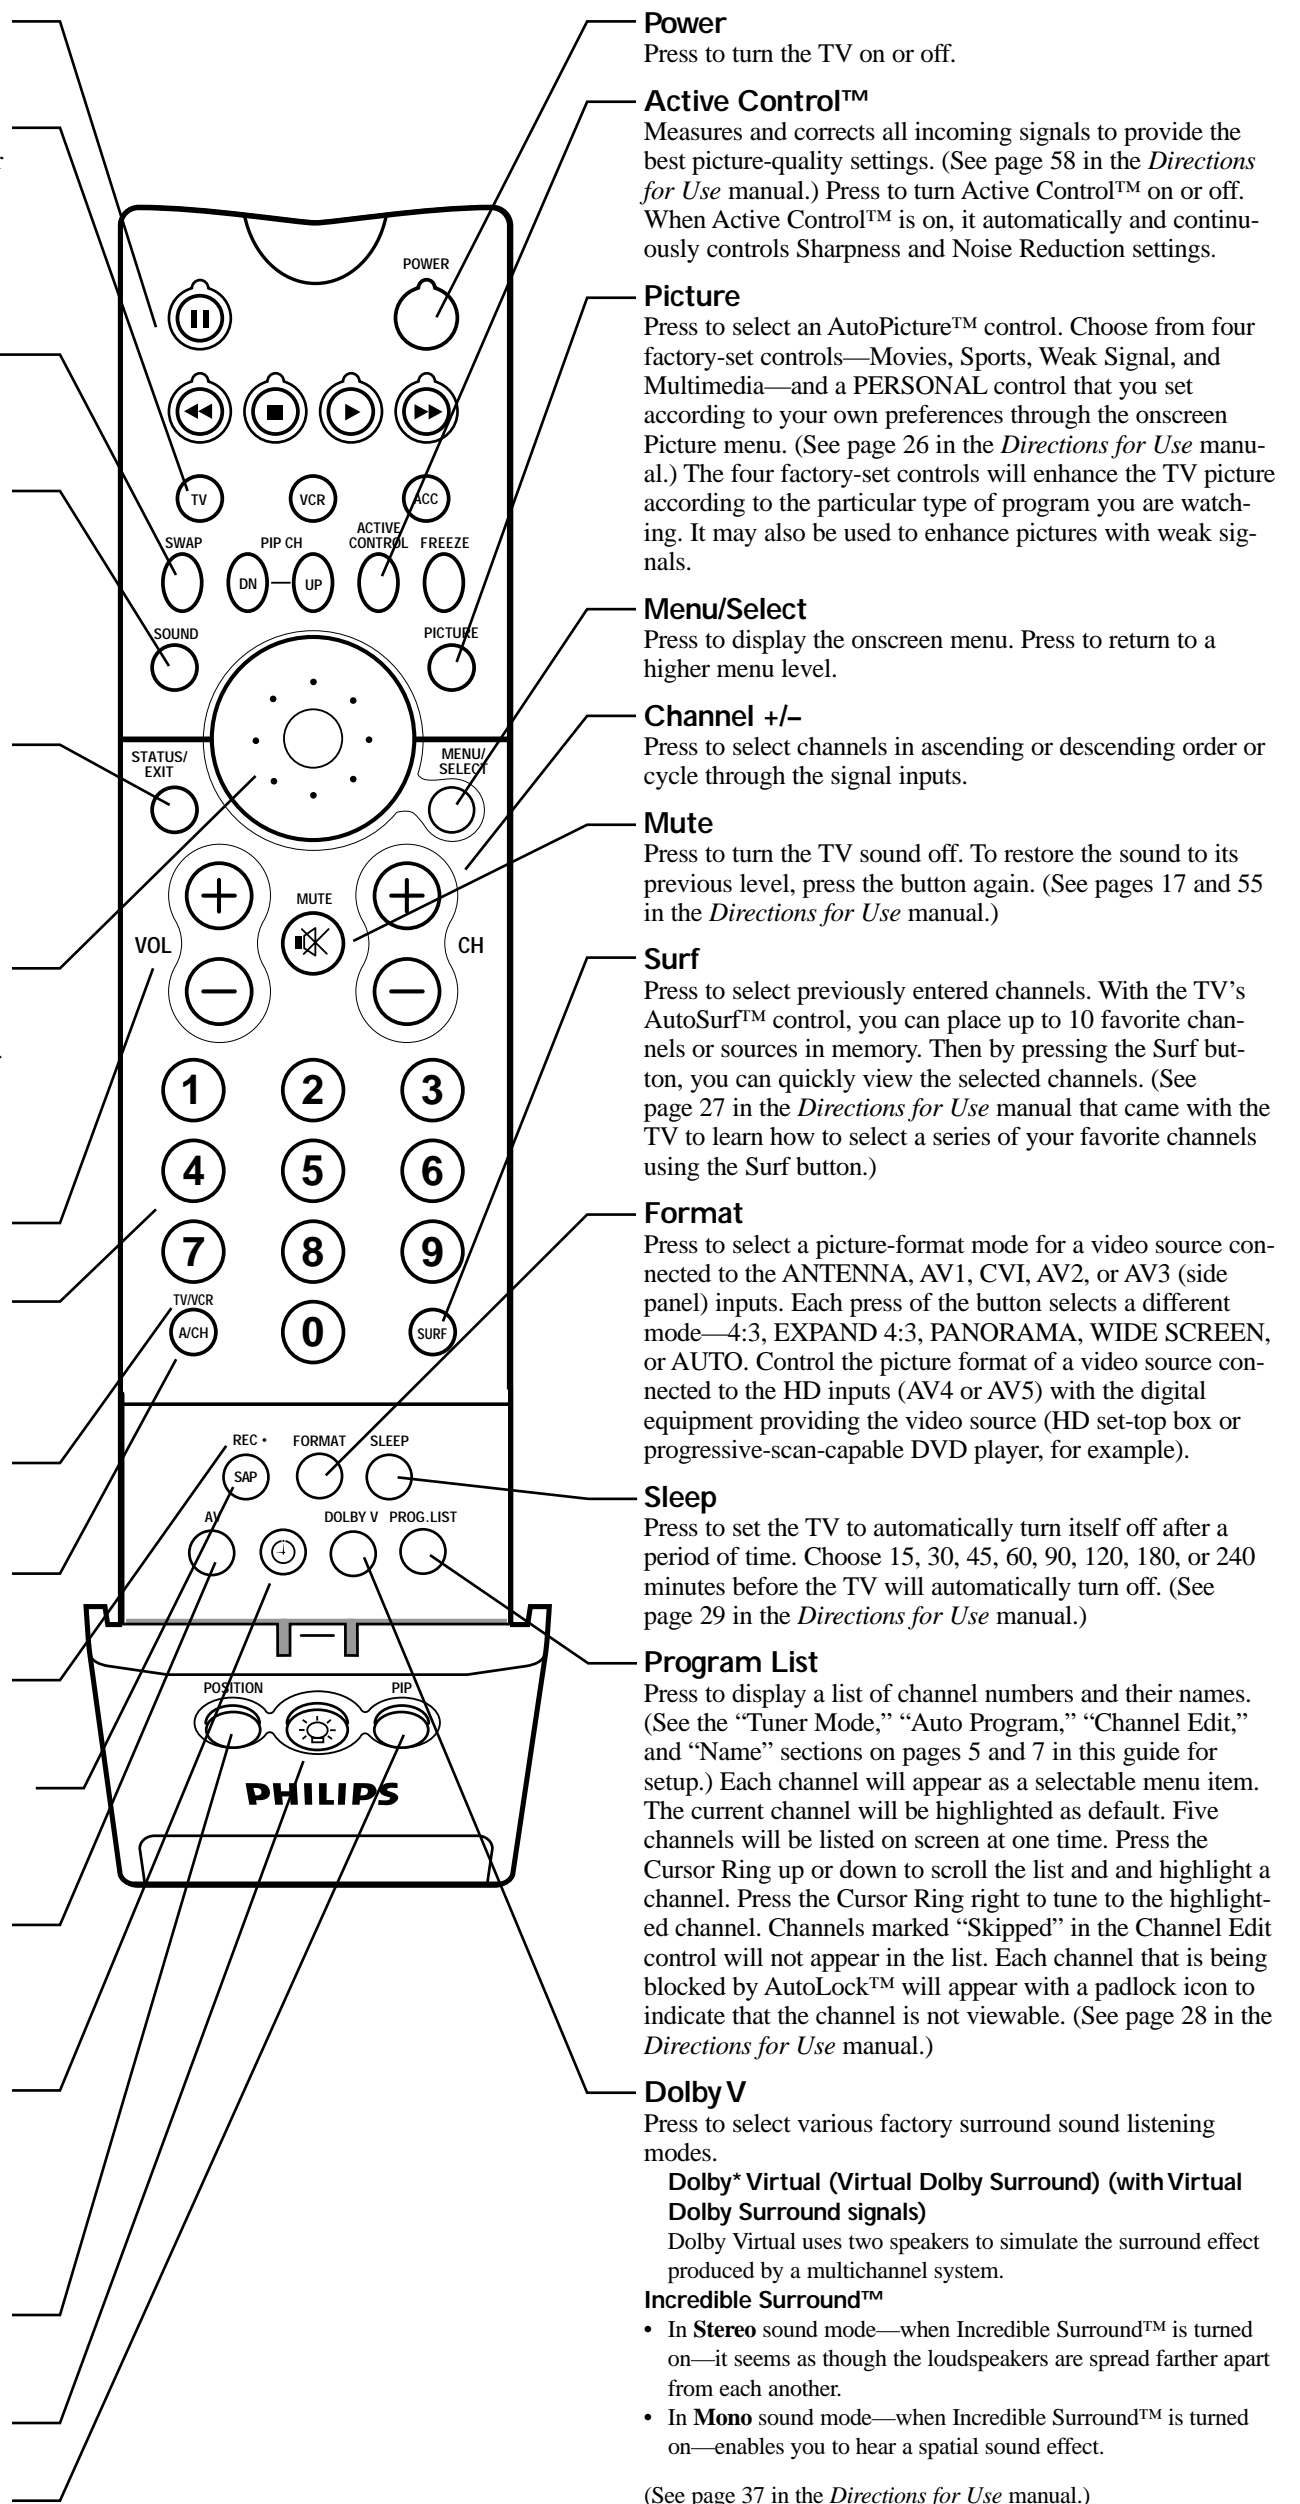

OPERATING THE TELEVISION AND REMOTE CONTROL



 
REMOTE CONTROL

ADJUSTING OR SETTING MENU OPTIONS

A menu is simply a list of options. You can adjust or set your TV's onscreen menu options by pressing buttons on the remote control. The following steps will familiarize you with how to use the remote control with the onscreen menu.

BEGIN

- 1 Press the **TV mode button** to ensure that the remote control is in TV mode.
- 2 Press the **MENU/SELECT** button to bring the menu to the screen. Then, as necessary, press the **CURSOR RING DOWN** or **UP** to highlight a menu option. Press the **CURSOR RING RIGHT** to enter the submenu for the option.
- 3 Within the submenu, press the **CURSOR RING DOWN** or **UP** to highlight an option.
Based on the submenu you are in, you can press the **CURSOR RING RIGHT** or **LEFT** to make an adjustment, select a setting, or enter a list or another submenu.
You can return to the submenu from a list by pressing the **CURSOR RING LEFT**.
To go from a submenu to the previous menu, highlight the option at the top of the screen and press the **CURSOR RING UP**. You can also press **MENU/SELECT** to return to the previous menu.
Press **STATUS/EXIT** to exit the menu.

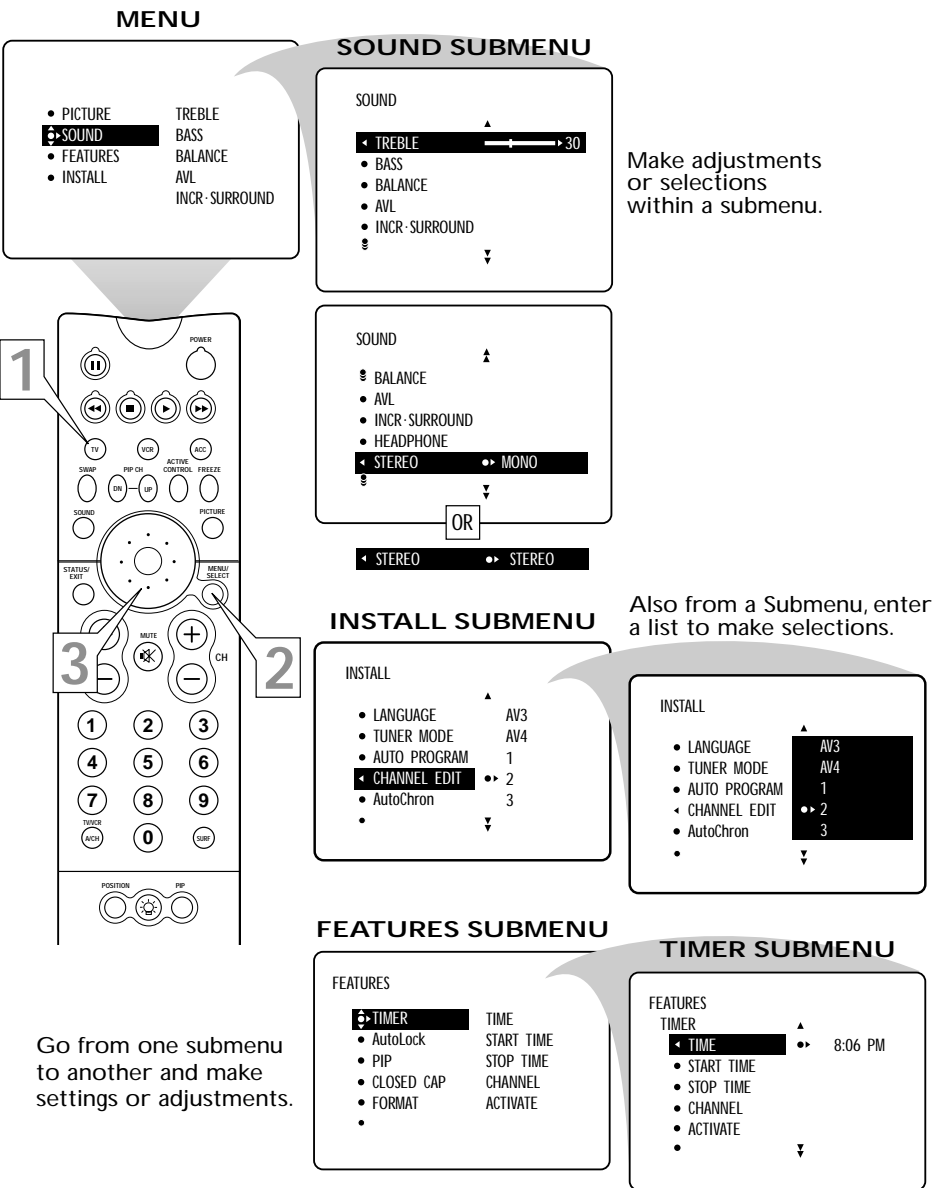

HELPFUL HINTS

- If you don't press any remote buttons, the menu will automatically disappear after about 20 seconds. To bring the menu back, press **MENU/SELECT**.
- Sometimes not all the menu items are visible on the screen. If more items exist in the menu, a cursor arrow will appear. Also, a bullet will appear for each remaining item, up to a maximum of three. This will help you determine how many items are left in the menu. Keep pressing the **CURSOR RING DOWN** until you display all items.
- Should your remote become lost or otherwise unavailable for use, you can use the buttons on the front of the TV to access the onscreen menu and make adjustments or settings. See page 2.

USING THE INSTALLATION FEATURES

 


LANGUAGE

The menu **LANGUAGE** control enables you to set the TV's onscreen menu and onscreen displays to be shown in English, French, or Spanish. Follow the steps in this section to set the control.

BEGIN

- 1 Press the **MENU/SELECT** button. The onscreen menu appears.
- 2 Press the **CURSOR RING DOWN** repeatedly until **INSTALL** is highlighted. Then press the **CURSOR RING RIGHT** to enter the **INSTALL** submenu.
- 3 Press the **CURSOR RING RIGHT** again to highlight the menu **LANGUAGE** options list.
- 4 Press the **CURSOR RING DOWN** or **UP** to select your menu language.
Instantaneously, the onscreen displays appear in the language that you choose.
- 5 Press the **STATUS/EXIT** button to exit the menus.

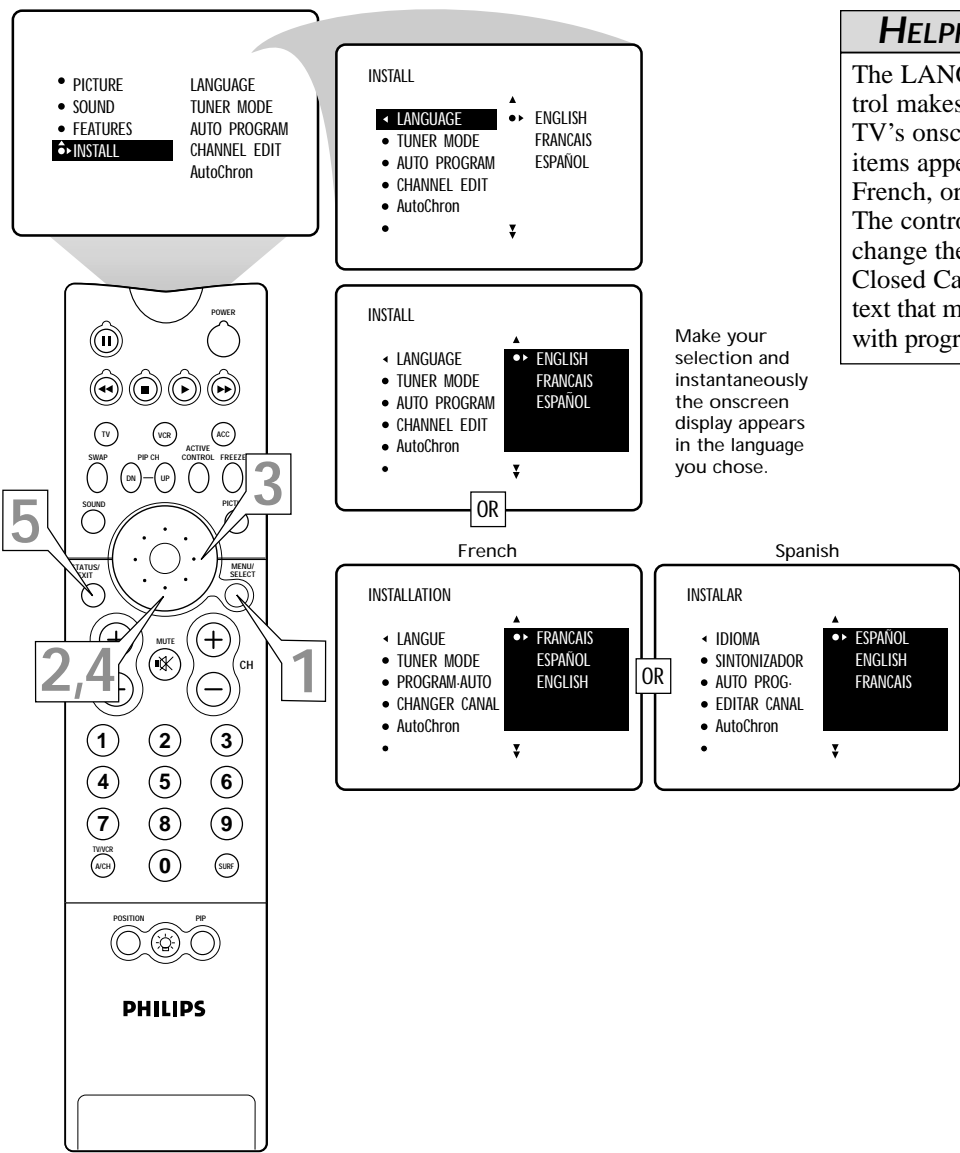

HELPFUL HINT

The **LANGUAGE** control makes only the TV's onscreen menu items appear in English, French, or Spanish text. The control does not change the language of Closed Captioning (CC) text that may be included with programs.

USING THE INSTALLATION FEATURES

 


TUNER MODE

Set the **TUNER MODE** control according to the type of signal you have connected to the TV—**ANTENNA** or **CABLE**. If you select **AUTO**, the TV will automatically detect the type of signal you have connected.

BEGIN

- 1 Press the **MENU/SELECT** button. The onscreen menu appears. Press the **CURSOR RING DOWN** repeatedly until **INSTALL** is highlighted.
- 2 Press the **CURSOR RING RIGHT** to enter the **INSTALL** submenu. Then press the **CURSOR RING DOWN** once to highlight **TUNER MODE**.
- 3 Press the **CURSOR RING RIGHT** to highlight the **TUNER MODE** options list.
- 4 Press the **CURSOR RING DOWN** or **UP** repeatedly until you select the option that matches your signal connection, **CABLE** or **ANTENNA**. If you want the TV to determine the type of signal, select **AUTO**. (You have selected an option when the dot and triangle are next to the option.)
- 5 Press the **STATUS/EXIT** button to exit the menu.
- 6 Proceed to the section on “Auto Program.”

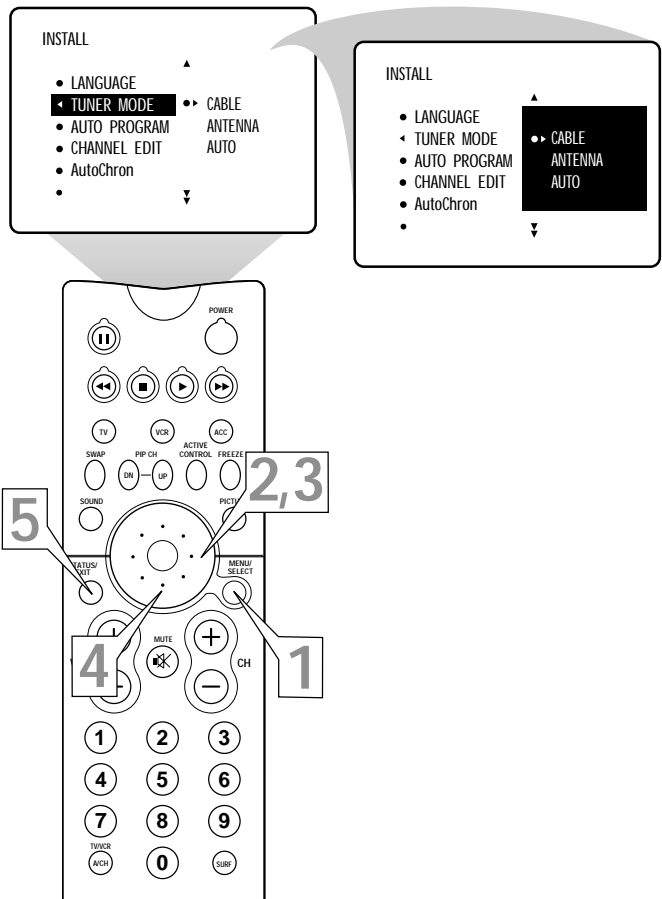

HELPFUL HINT

If you select the **Tuner Mode** option that matches your signal source rather than **AUTO**, the time required for **AUTO PROGRAM** to store channels to the TV’s memory can be reduced.

 


AUTO PROGRAM

The **AUTO PROGRAM** feature will scan for channels with active broadcast signals and store those channels in the TV’s memory. It will tune up to 69 channels for antenna, and up to 125 channels for cable. After you run **AUTO PROGRAM**, you can use the **CH(annel) +/-** buttons to quickly and easily select stations. You can also press the **PROG. LIST** (Program List) button on your remote to see a list of the channels.

BEGIN

- 1 Press the **MENU/SELECT** button. The onscreen menu appears. Then press the **CURSOR RING DOWN** repeatedly until **INSTALL** is highlighted.
- 2 Press the **CURSOR RING RIGHT** to enter the **INSTALL** submenu. Then press the **CURSOR RING DOWN** repeatedly until **AUTO PROGRAM** is highlighted.
- 3 Press the **CURSOR RING RIGHT** to begin the automatic search for channels. The progress of autoprogramming is displayed.
- 4 When the programming is done, press the **STATUS EXIT** button to exit the menu.

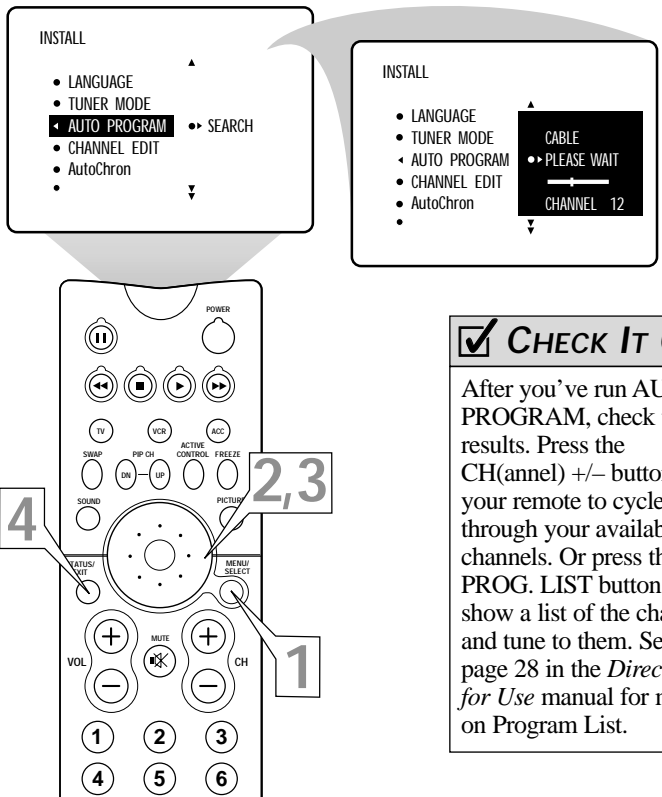

HELPFUL HINTS

- Philips strongly recommends that you run **Auto Program**. Otherwise, the TV may not tune the channels properly, resulting in improper pictures.
- If you change signal sources—to a new cable company or from antenna to cable, for example—be sure that **Tuner Mode** is properly set for the new source. Then run **Auto Program** again. This will ensure that the channels are correctly stored in the TV’s memory.
- If you have made **AutoLock™** settings, remember that you must remove any channel blocks before **Auto Program** will work. (See pages 46–54 in the *Directions for Use* manual.)

 


CHANNEL EDIT

This feature allows you to edit or skip channels from the channel list that have bad or weak signals or channels you do not want to watch.

BEGIN

- 1 Press the **MENU/SELECT** button. The onscreen menu appears. Then press the **CURSOR RING DOWN** repeatedly until **INSTALL** is highlighted. Press the **CURSOR RING** right to enter the **INSTALL** submenu.
- 2 Press the **CURSOR RING DOWN** repeatedly until **CHANNEL EDIT** is highlighted. Then press the **CURSOR RING RIGHT** or **LEFT** to access the **CHANNEL EDIT** list.
- 3 Press the **CURSOR RING UP** or **DOWN** to scroll through the list of channels. Or press the **NUMBER** buttons on your remote control to select a specific channel.
- 4 With the channel you want to edit selected, press the **CURSOR RING RIGHT** to mark the channel as **SKIPPED**. (Channels you mark **SKIPPED** will not appear when you use the **CH[annel] +/-** buttons to change channels while watching TV.)
When you want to add a channel that has been marked **SKIPPED**, press the **CURSOR RING UP** or **DOWN** to highlight the channel. Then press the **CURSOR RING RIGHT** to remove the word **SKIPPED**.
- 5 Press the **STATUS/EXIT** button to exit the menu.

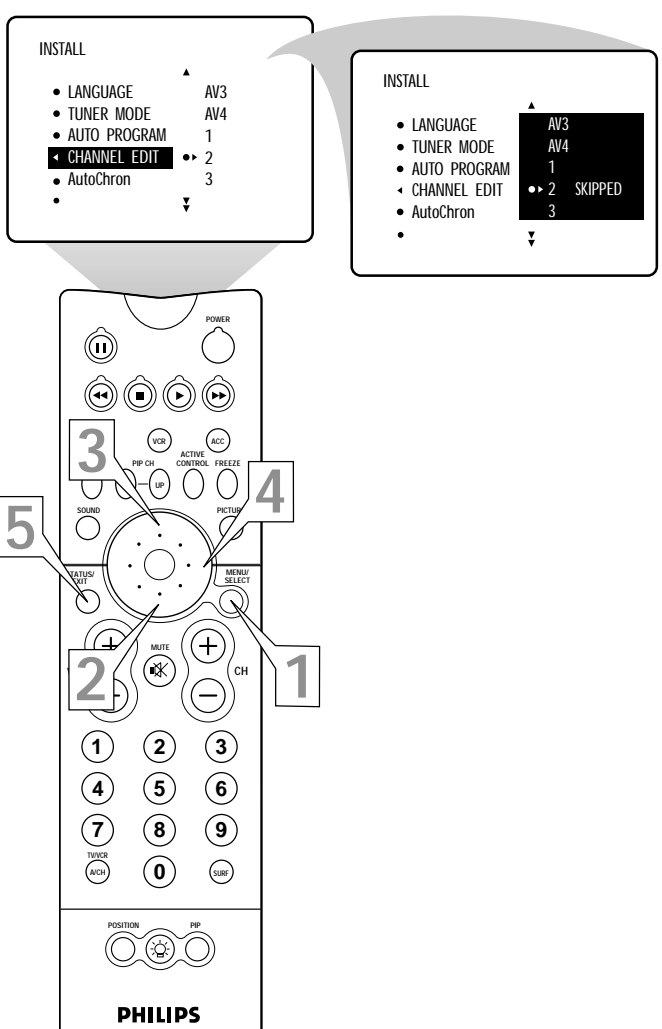

HELPFUL HINT

Channels that **Auto Program** (see above) determined not to contain active broadcast signals are marked **SKIPPED**.

USING THE INSTALLATION FEATURES



AutoChron

 
AutoChron™ gives you the option of setting the time manually or automatically.

SETTING TIME AUTOMATICALLY

Follow the steps below to set AutoChron™ to download the time from your PBS station to your TV. After successful setup, AutoChron™ will automatically maintain the correct time using your PBS station until you set the time using the AutoChron™ MANUAL option (see below).

BEGIN

- Press the MENU/SELECT button.** The onscreen menu appears. Then press the CURSOR RING DOWN repeatedly until INSTALL is highlighted.
- Press the CURSOR RING RIGHT to enter the INSTALL submenu.** Then press the CURSOR RING DOWN repeatedly until AutoChron is highlighted.
- Press the CURSOR RING RIGHT** to enter the AutoChron SET TIME area.
- Press the CURSOR RING RIGHT again** to select AUTO. Within a few seconds, a menu containing the time-zone options appears.
- If necessary, press the CURSOR RING UP or DOWN** to highlight your correct time zone. Then press the CURSOR RING RIGHT. Within a few seconds, the option of Daylight Savings Time appears on screen.
- If the Daylight Savings Time option you want to select is not highlighted, press the CURSOR RING UP or DOWN** to highlight the option. Then press the CURSOR RING RIGHT to activate your selection.
- Press the number buttons** on your remote to enter the channel number for your PBS station (02, 15, or 121, for example). Wait until the TV completes its search. If the time was not found, you will need to locate the correct channel number for your PBS station and input that number.
- Press the STATUS/EXIT button** to exit the menu.

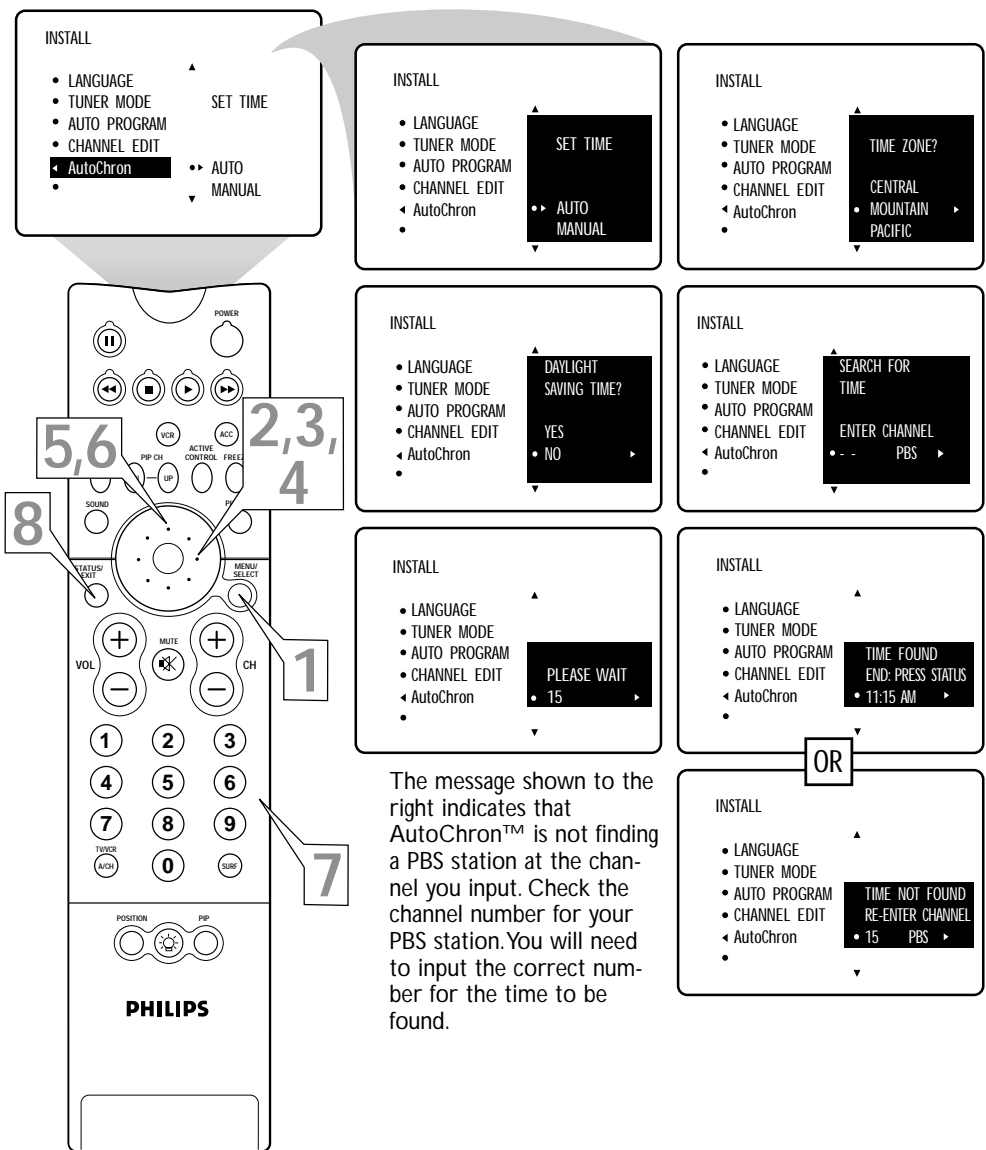


The message shown to the right indicates that AutoChron™ is not finding a PBS station at the channel you input. Check the channel number for your PBS station. You will need to input the correct number for the time to be found.


SETTING TIME MANUALLY


BEGIN

 - Follow steps 1–3 in the section “Setting Time Automatically” above, then press the CURSOR RING DOWN** to highlight MANUAL and CURSOR RING RIGHT to enter the MANUAL time input area.
- Use the number buttons on your remote control** to input the first digit for the time. You can also press the CURSOR RING UP or DOWN to select a digit. Press the CURSOR RING RIGHT to move to the next digit input slot and input the time.
If you should need to change a number you have input, you can cursor left or right to the digit input slot to make the correction.
- After you have input the time, press the CURSOR RING RIGHT** to enter the AM/PM area. Then press the CURSOR RING UP or DOWN to select AM or PM.
- Press the STATUS/EXIT button** to exit the menu.

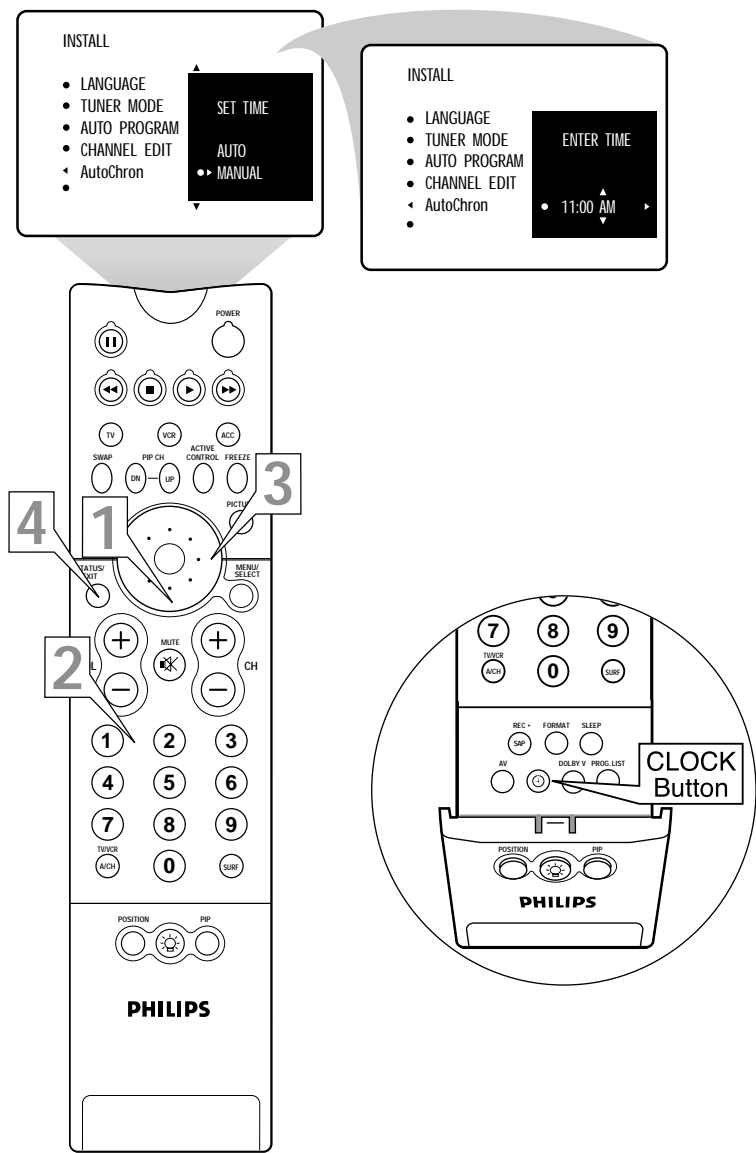

HELPFUL HINTS

 - The CLOCK button  on your remote provides another way in which you can set the TV's clock.
- After setting the clock, you will be able to access the time by pressing the STATUS/EXIT button. Or you can view the time constantly in the upper right-hand corner of the screen by turning the DISPLAY control on (see page 42 in the *Directions for Use* manual).

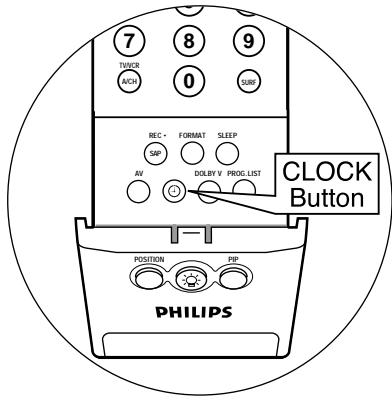

USING THE INSTALLATION FEATURES

 


NAME

The channel **NAME** feature allows you to list the “call” letters of your favorite stations beside their channel numbers when they appear on the screen. The TV has in memory a list of the 50 most popular channel names (NBC, ABC, or FOX, for example). You also can enter a custom name (up to five characters).

BEGIN

- Press the NUMBER buttons, the CH(annel) +/- buttons, or the AV button** to select a TV channel or input source to which you want to assign a name or whose name you want to modify.
- Press the MENU/SELECT button.** The onscreen menu appears. Then press the CURSOR RING DOWN repeatedly until INSTALL is highlighted. Press the CURSOR RING RIGHT to enter the INSTALL submenu.
- Press the CURSOR RING DOWN** repeatedly until the NAME control is highlighted. Then press the CURSOR RING RIGHT to highlight the NAME options area.
- At this point you can choose between options of creating a personal name for the channel or selecting a preset one from a list.
To create your own personal name for the channel or change a personal name you created previously, press the CURSOR RING RIGHT. Then press the CURSOR RING UP or DOWN to select the first character of the name. You can input up to five characters for the name. When finished, press the MENU/SELECT button.
Or
To choose from the list of preset names, press the CURSOR RING UP or DOWN to highlight your choice for the channel name. Press the CURSOR RING RIGHT to select the name. Then press the MENU/SELECT button.
- Press the STATUS/EXIT button** to exit the menu.
When you press the STATUS/EXIT button when no onscreen display is present or change to the channel you’ve named, the name will appear on screen next to the channel number or signal source name.

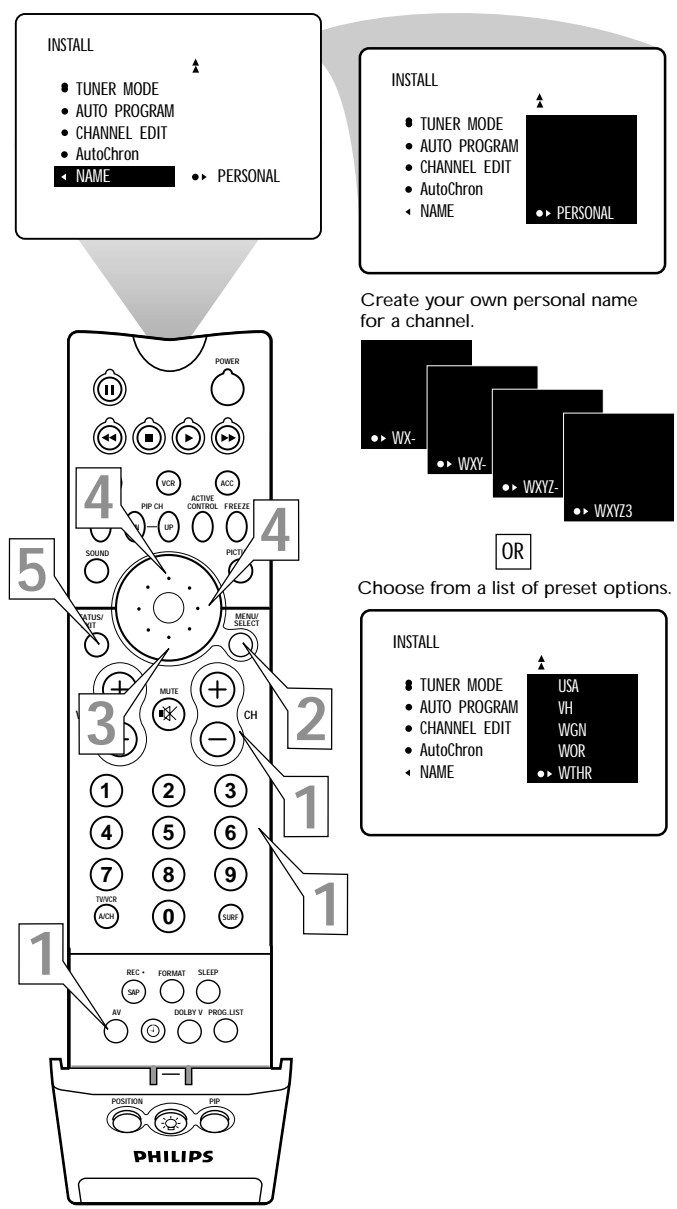

HELPFUL HINTS

- The five **PERSONAL** name characters you can input may be letters, a dash, or the numbers 0 through 9.
- If you begin inputting a personal name or changing an existing one and decide you’d rather select a name from the preset list, press the **MENU/SELECT** button. This will return you to the **INSTALL** submenu, with **NAME** highlighted. Simply press the **CURSOR RING RIGHT** to highlight the **NAME** options area again and choose a preset name as explained in step 4 to the left.

USING AUTO INTELLISENSE™ TO ADJUST PICTURE CONVERGENCE

Your projection TV has three color projection tubes: one for red, one for green, and one for blue. When mixed in proper proportion, the beams of light coming from the tubes can produce any color. To create a clear picture, however, these color beams must be precisely aligned. This alignment is called **convergence**. Bumps and vibrations, moving the set, or the presence of magnetic fields can cause the color beams to become improperly aligned, or **misconverged**, resulting in a fuzzy picture. Using the Auto IntelliSense™ feature, you can automatically adjust convergence in 20 seconds or less.

 
NOTE: Allow the TV to warm up for 20 minutes before using Auto IntelliSense™.

ACTIVATING AUTO INTELLISENSE™ USING THE TV BUTTONS

With the TV on, **press the VOL – and SOURCE SELECT buttons simultaneously.**

ACTIVATING AUTO INTELLISENSE™ USING THE ONSCREEN PICTURE SUBMENU

Within the **PICTURE** submenu, **highlight INTELLISENSE** and then **press the CURSOR RING LEFT or RIGHT** to activate the feature.

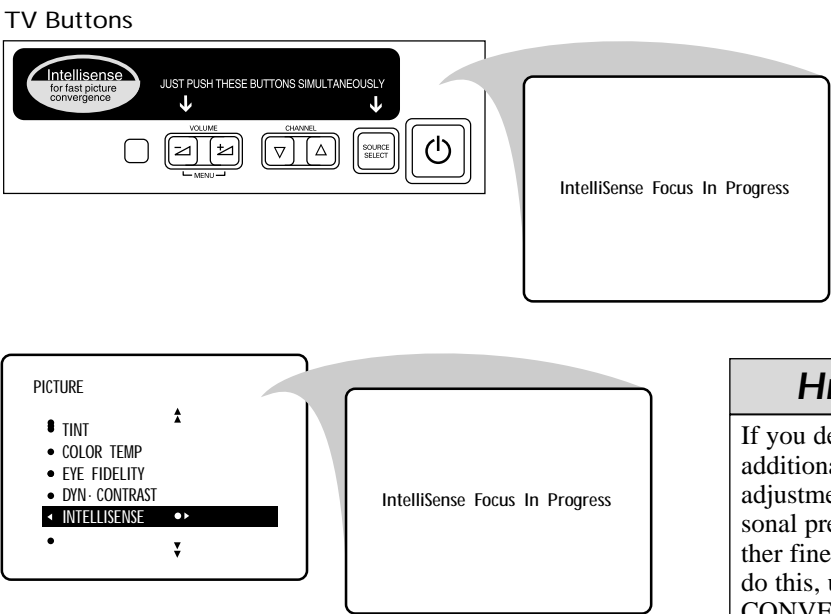


HELPFUL HINT

If you desire, you can make additional convergence adjustments to suit your personal preferences or to further fine-tune the picture. To do this, use the **MANUAL CONVERGE** controls in the **PICTURE** submenu. See pages 33 and 34 in the *Directions for Use* manual that also came with your set.

USING THE PICTURE-IN-PICTURE (PIP) FEATURE

The Picture-In-Picture (PIP) feature allows you to display a subscreen within your main screen and watch two video sources at once. Because your set has two tuners, you can enjoy all the benefits of PIP without using a VCR as a second tuner for your PIP picture. Tune to your favorite show on the main screen with tuner one while scanning other channels with tuner two in the PIP window. Also view the AV1, AV2, or AV3 sources in the PIP window. **NOTE:** CVI cannot be displayed in the PIP window, and AV4 and AV5 do not function with PIP. (For information on connecting accessory devices to the AV inputs, see the Directions for Use manual that came with your set. Connection information begins on page 6.)

 With the dual-window option you can divide the main screen in half, showing the main picture on the left side and the PIP picture on the right.

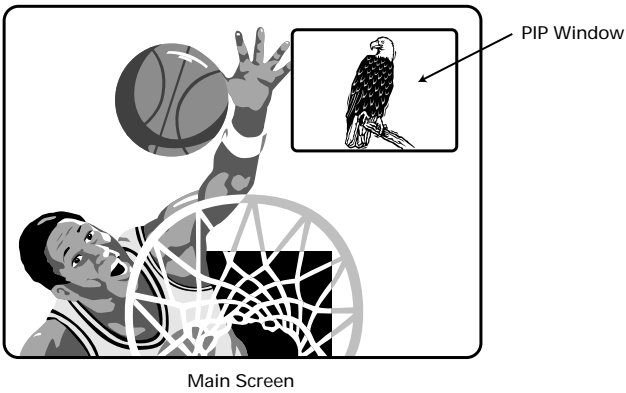

USING THE PIP BUTTONS

BEGIN

- 1 Press the PIP button to turn PIP on.
- 2 Press the PIP button a second time to make the PIP window smaller.
- 3 Press the PIP button a third time to turn on the dual-window screen. The PIP window is on the right, equally sharing the screen with the main picture.
- 4 To select a video source to watch in the PIP window, press the PIP CH(annel) DN/UP buttons.
If you press and hold the PIP CH UP button for three seconds, the set will automatically perform a forward scan for channels. Press and hold the PIP CH DN button for three seconds, and the set will automatically perform a backward scan for channels. Auto scanning will stop if you press any key, and it will also stop upon reaching the channel at which scanning began.
- 5 To turn PIP off, press the PIP button a fourth time.



MOVING THE PIP SCREEN

 
Press the POSITION button. Each time you press this button, the PIP screen moves to another corner of the main screen.

FREEZING THE PIP SCREEN

Press the FREEZE button. The picture in the PIP screen stands still. Stopping motion allows you to write down onscreen phone numbers or addresses.

SWITCHING THE MAIN AND PIP SCREENS

Press the SWAP button. The main screen and PIP screen change places.

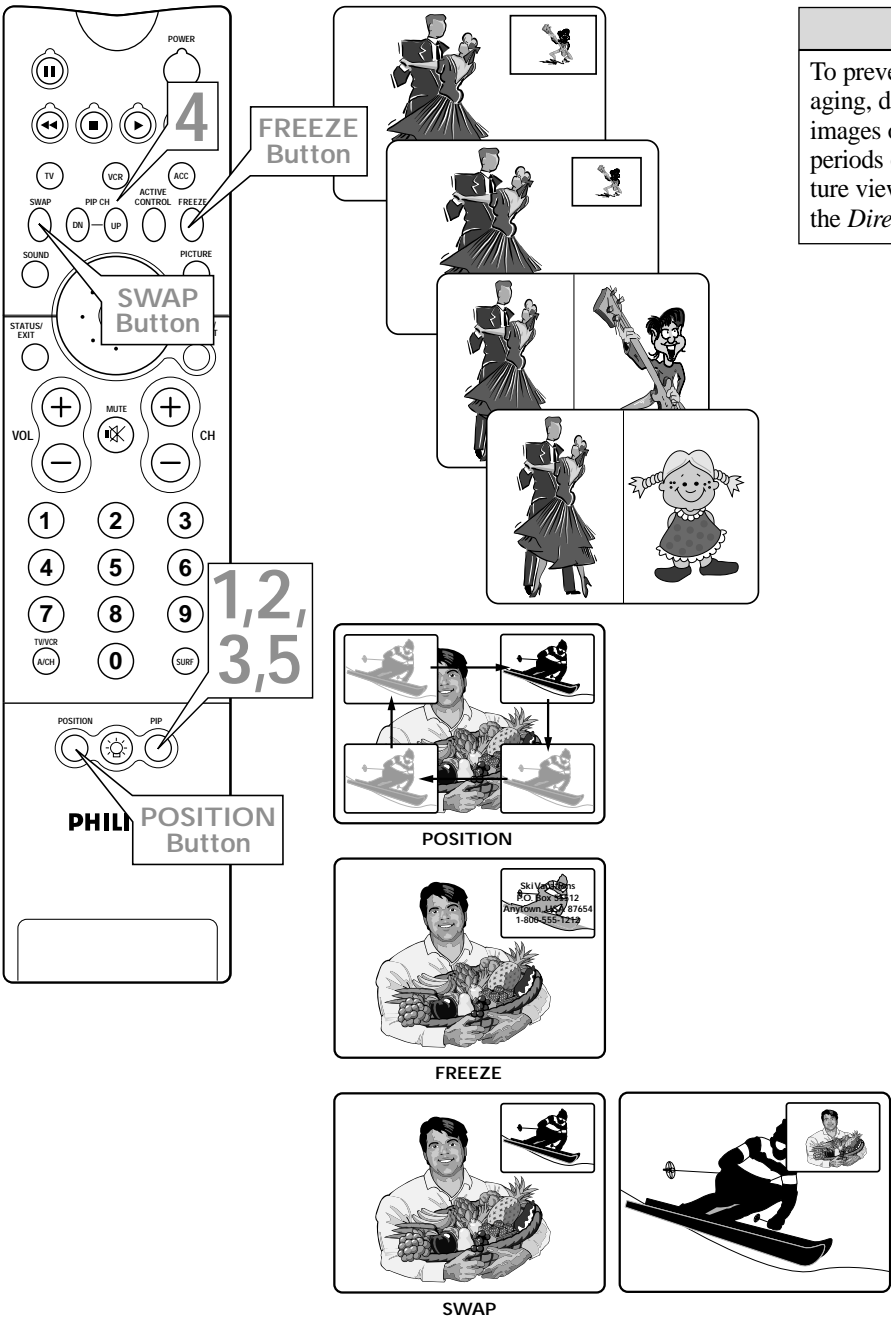

WARNING

To prevent uneven picture-tube aging, do not leave stationary images on screen for extended periods of time. Vary your picture viewing. See page 62 in the Directions for Use manual.



ADJUSTING PIP TINT

The Picture-in-Picture (PIP) TINT control allows you to adjust the PIP picture to obtain natural skin tones.

BEGIN

- 1 Press the MENU/SELECT button. The onscreen menu appears. Then press the CURSOR RING DOWN twice to highlight FEATURES.
- 2 Press the CURSOR RING RIGHT to enter the FEATURES submenu. Then press the CURSOR RING DOWN repeatedly until the PIP item is highlighted. Press the CURSOR RING RIGHT to enter the PIP submenu.
- 3 Press the CURSOR RING RIGHT or LEFT to adjust the TINT to the desired level.
- 4 Press the STATUS/EXIT button to exit the menu.

